


# Pbar Rings

Notes:

Enclosure requires "Pbar Rings" key to enter  
Keys available at AP-10 or from MCR

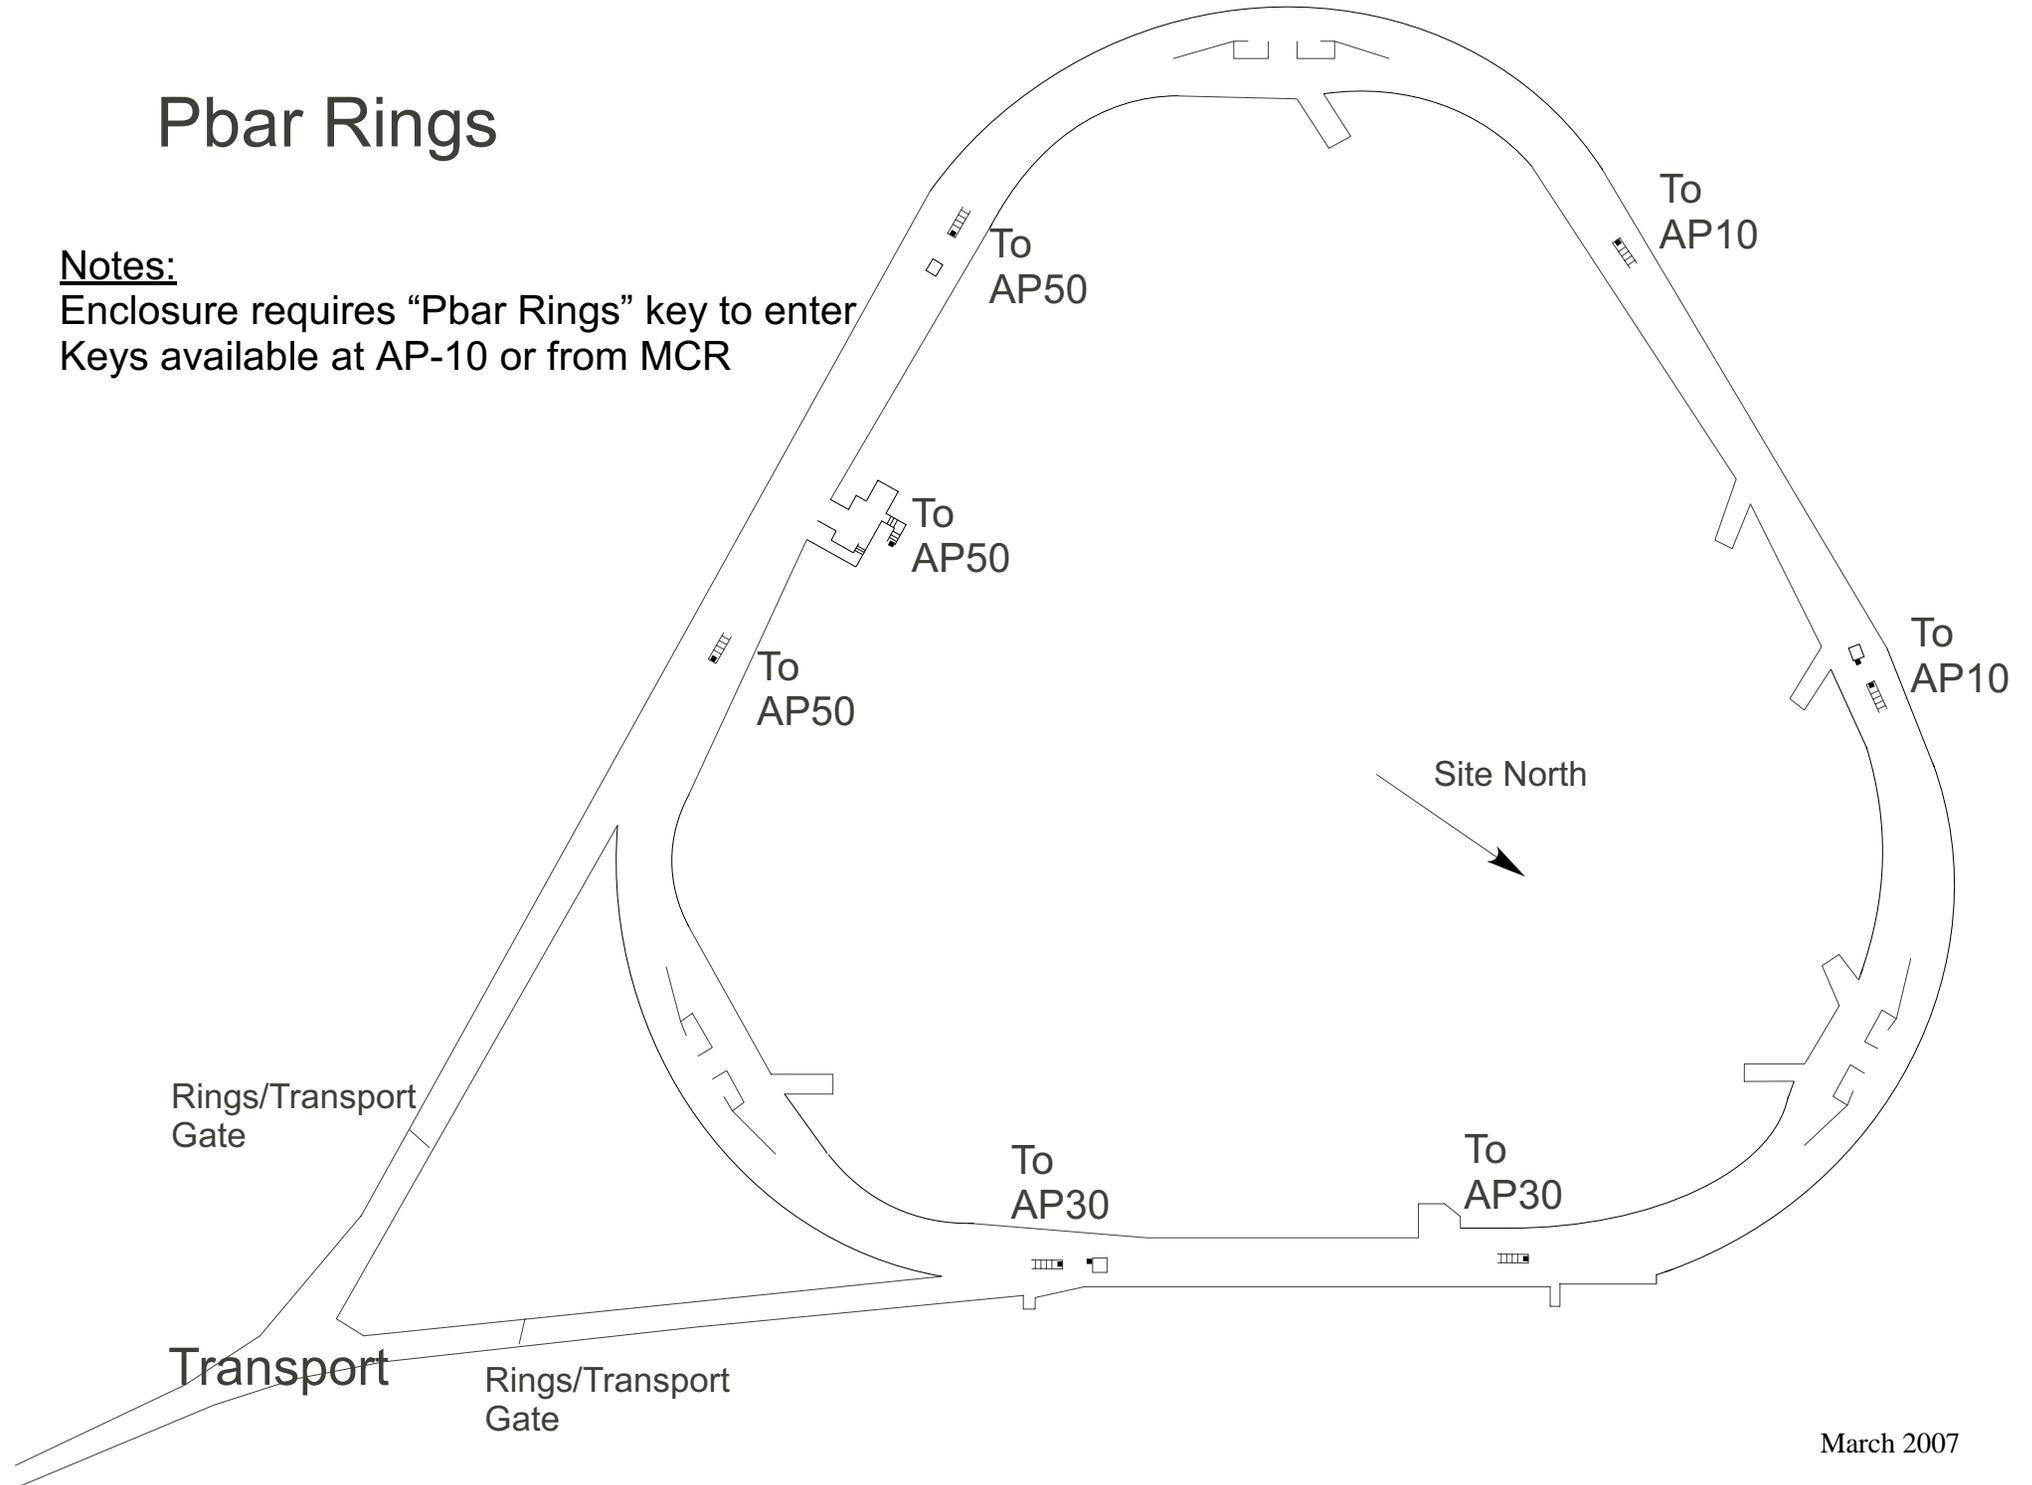


# Pbar Transport




Notes:

AP-0 service bldg requires "AP-0" key to enter  
Enclosure requires "Pbar Transport" key to enter

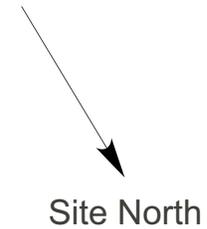

# Pbar Pre-Target/Pre-Vault

Emergency Exit

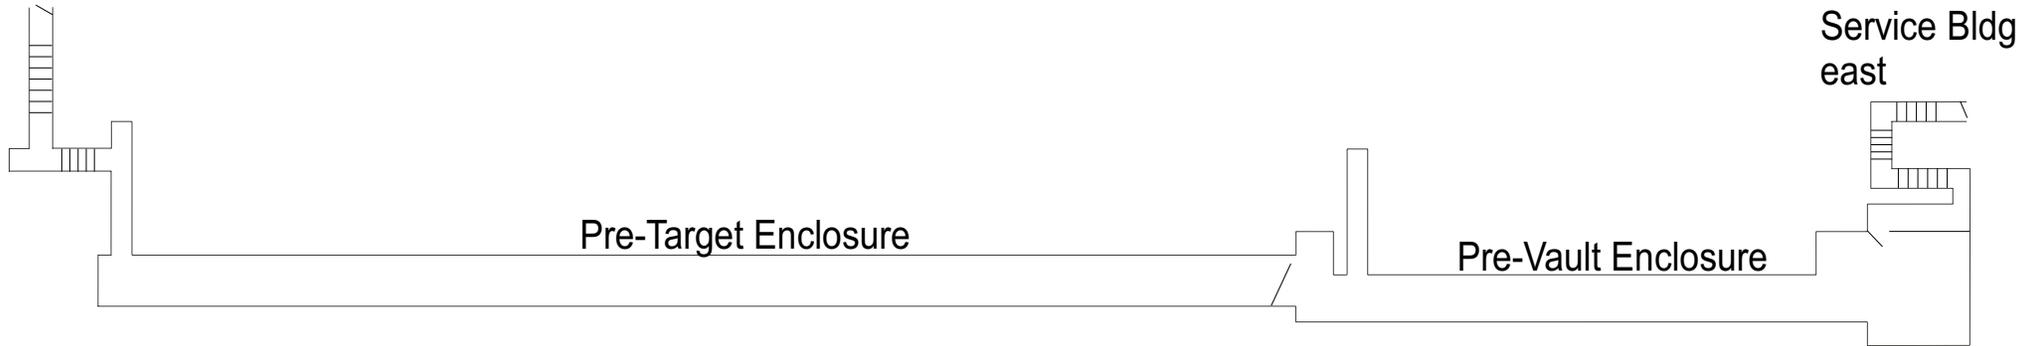

## Notes:

AP-0 service bldg requires "AP-0" key to enter

Pre-Target and Pre-Vault each have their own enter keys



Site North