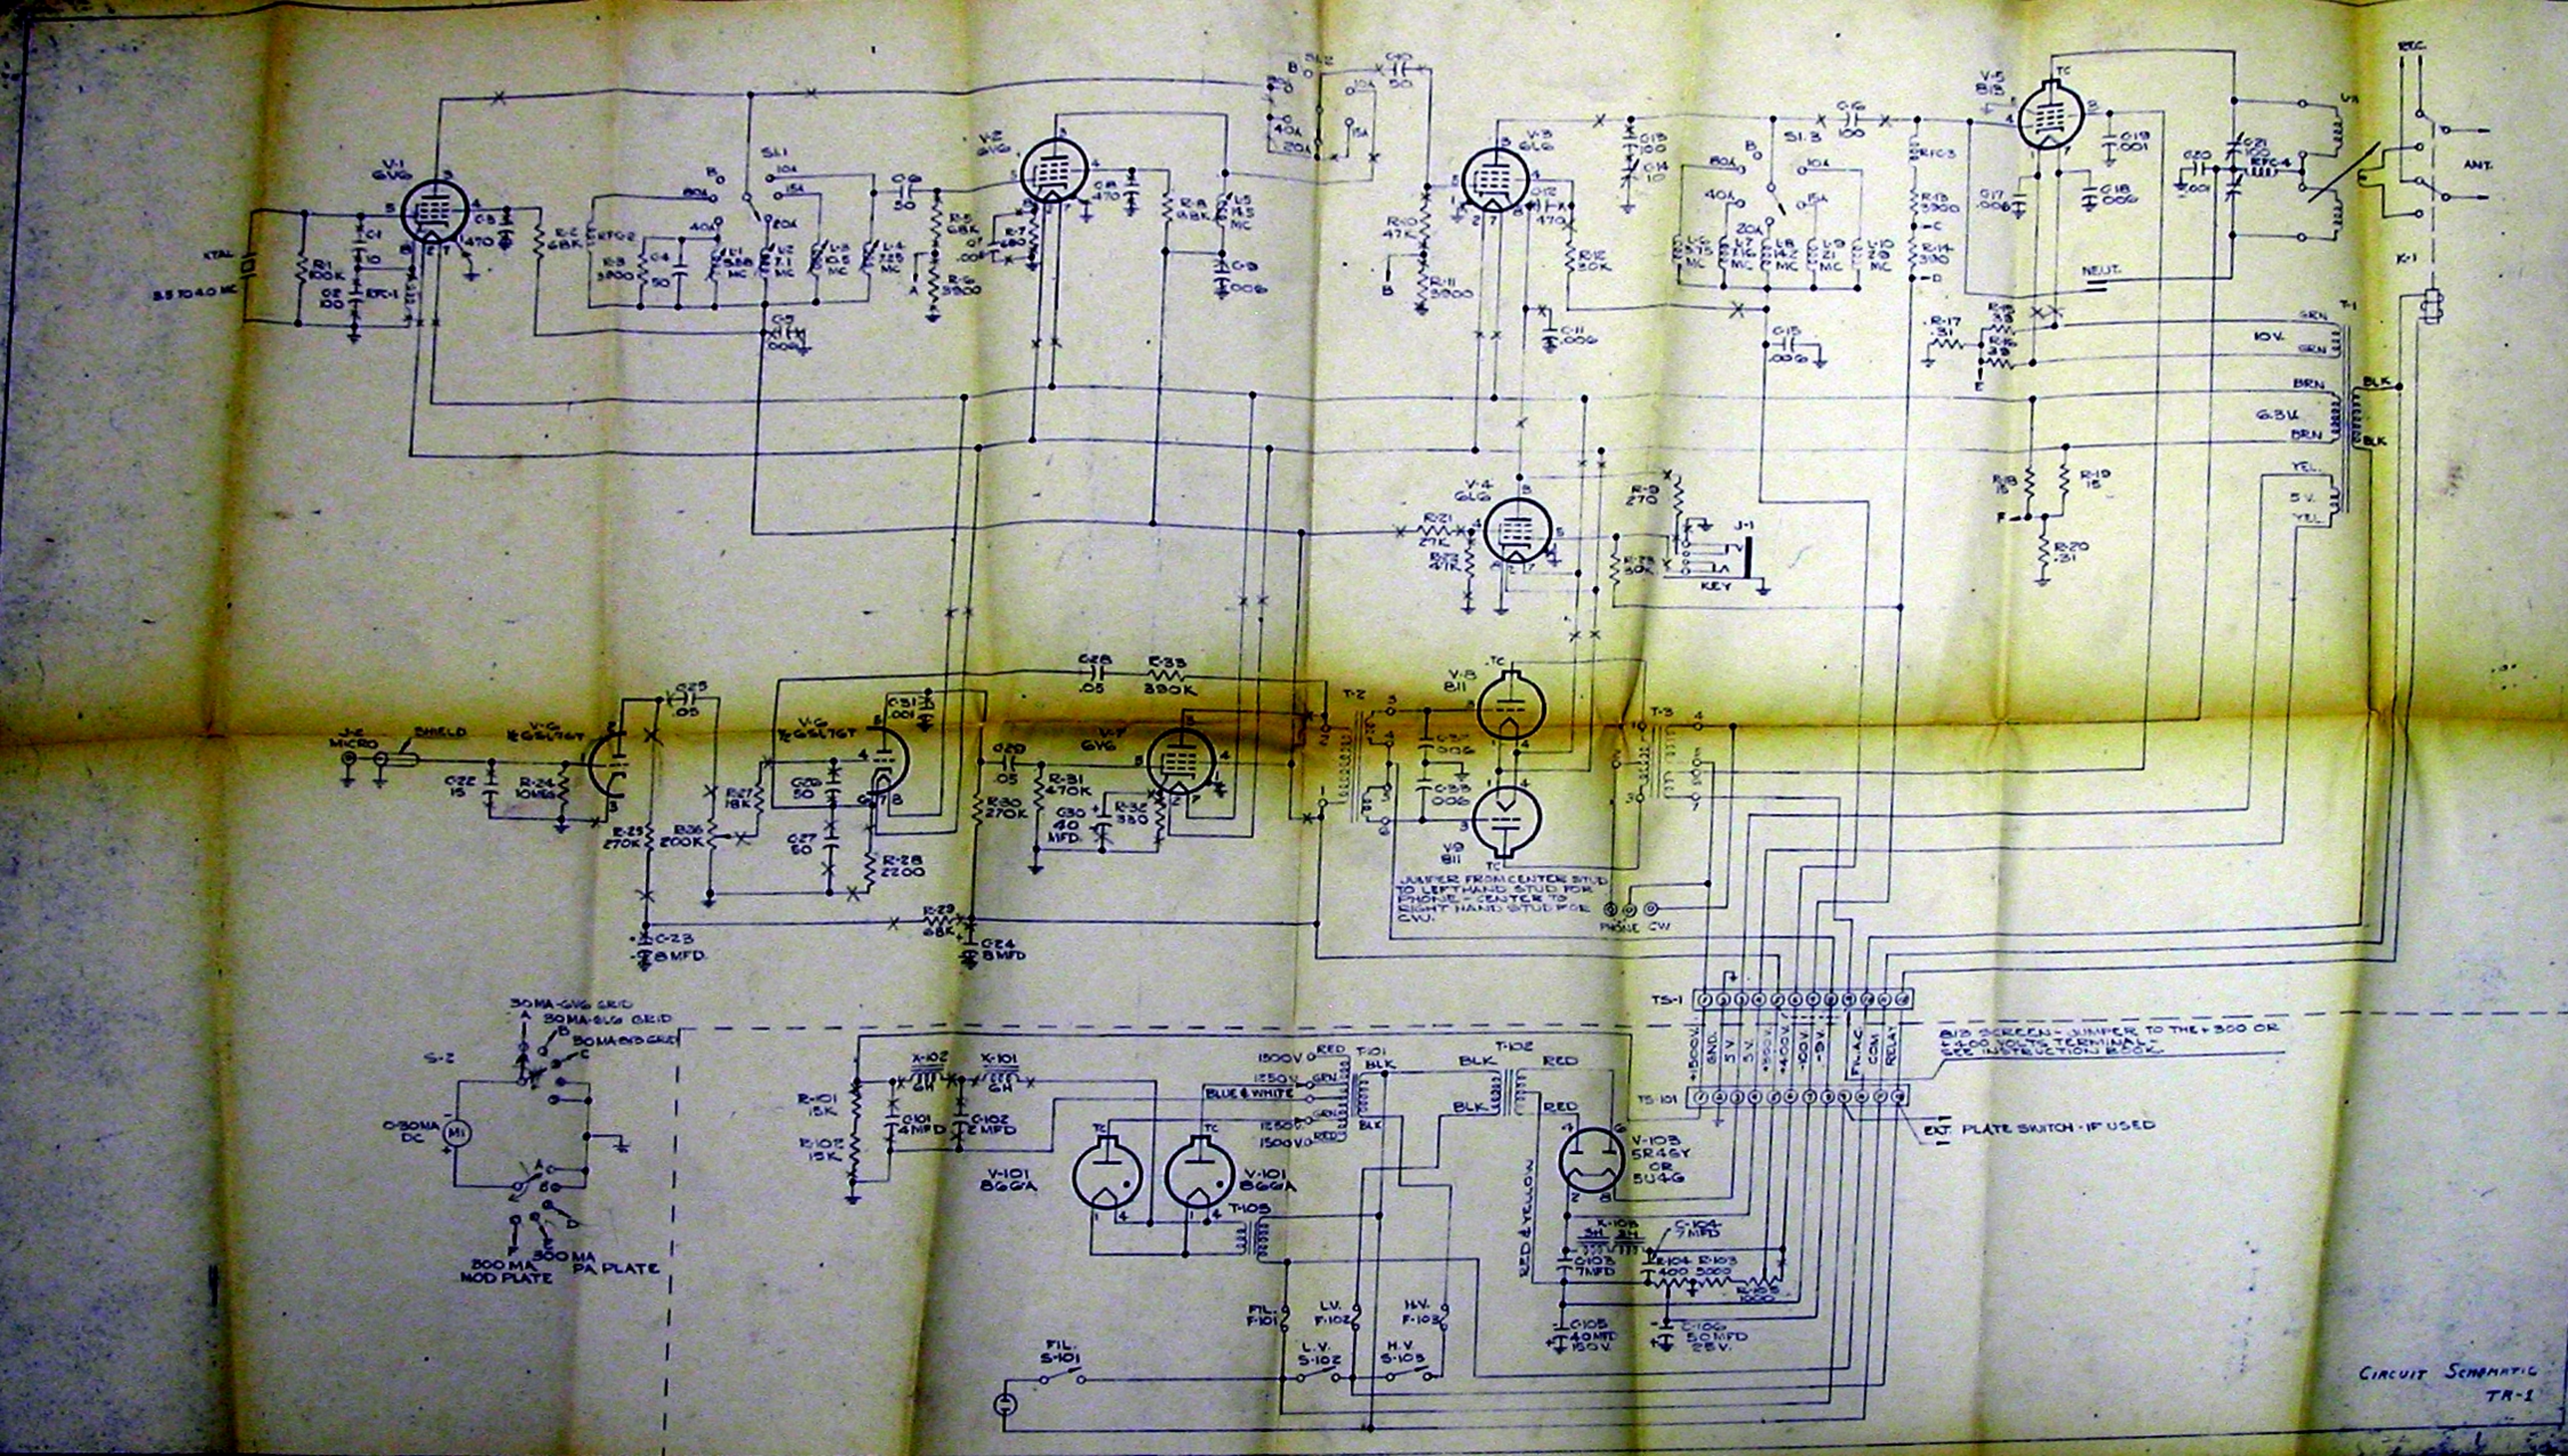
V-1 6V6
V-2 6V6
V-3 6L6
V-4 6L6
V-5 813
V-6 6SL7GT
V-7 6V6
V-8 811
V-9 811
V-101 866A
V-103 5R4GY OR 5U4G
XTAL 3.5 TO 4.0 MC
ANT.
KEY
J-1
J-2 MICRO
SHIELD
PHONE CW
JUMPER FROM CENTER STUD TO LEFTHAND STUD FOR PHONE - CENTER TO RIGHT HAND STUD FOR CW.
NEUT.
10 V.
6.3 V.
5 V.
BLK.
BRN.
GRN.
YEL.
RED
BLUE & WHITE
RED & YELLOW
TS-1
TS-101
EXT PLATE SWITCH - IF USED
PIN SCREEN - JUMPER TO THE + 300 OR + 400 VOLTS TERMINAL - SEE INSTRUCTION BOOK.
S-2
30 MA-6V6 GRID
30 MA-6L6 GRID
30 MA-MOD GRID
0-30 MA DC
300 MA MOD PLATE
300 MA PA PLATE
FIL. S-101
L.V. S-102
H.V. S-103
FIL. F-101
L.V. F-102
H.V. F-103
T-101
T-102
T-103
T-2
T-3
K-1
RELAY
CIRCUIT SCHEMATIC TR-1